



**123 Bernard Street  
CHELTENHAM VIC 3192**


**Tel: + 613 9532 6000**

**Tel: + 613 9553 6100**


**Fax: + 613 9532 6001**

**www.iceignition.com**

**Wiring Diagram 7 Amp 2 Step (7062NR) Ignition Box - No Booster**

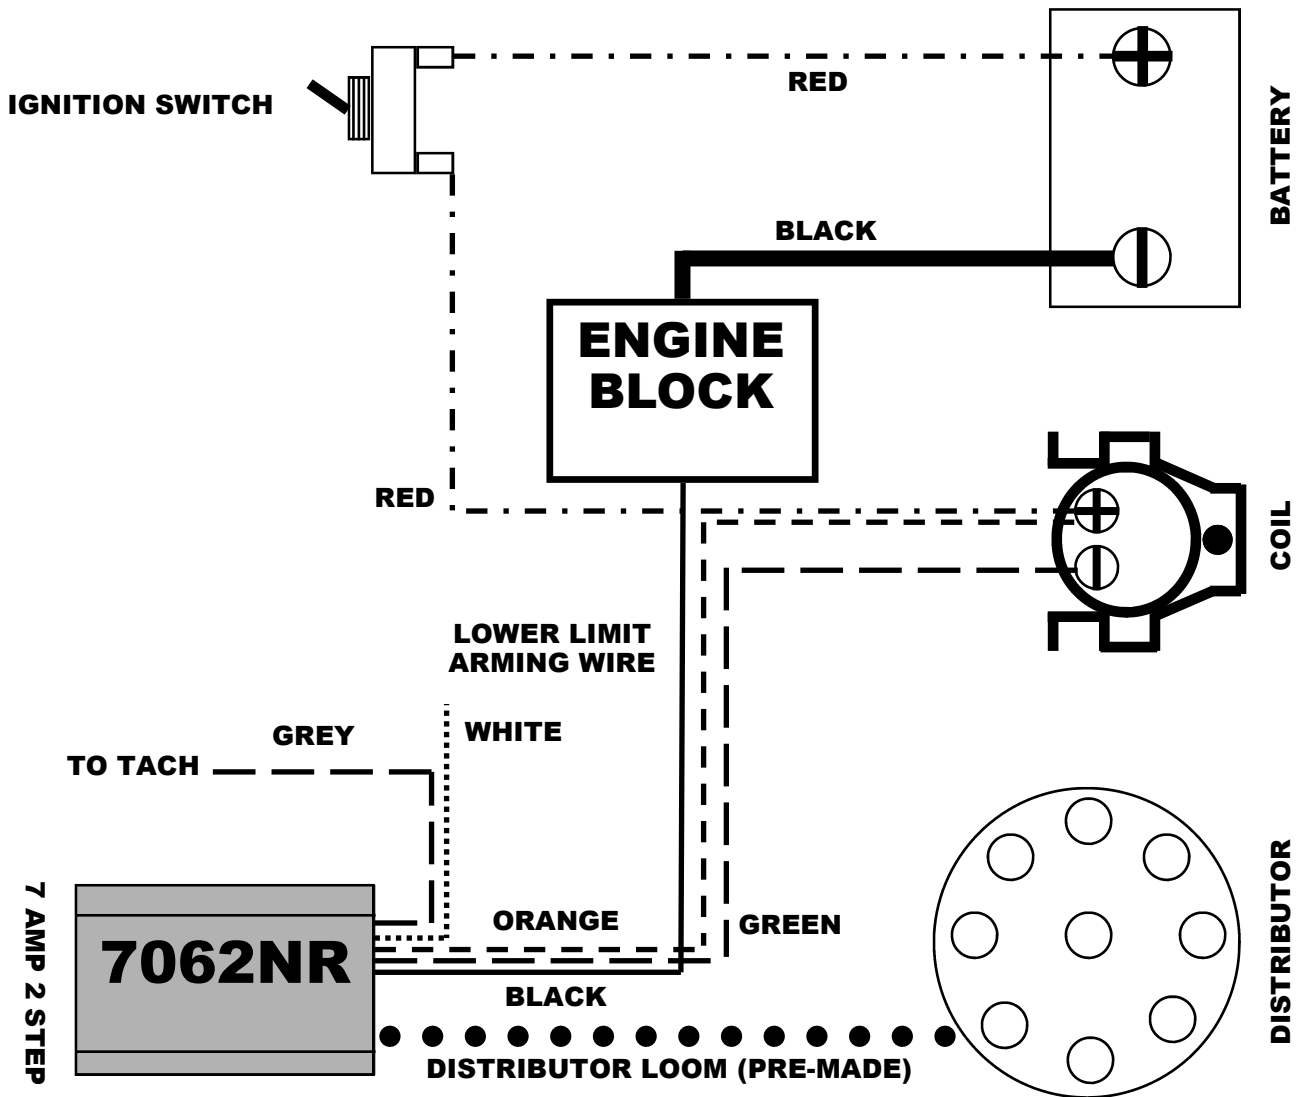

**WIRE COLOR LEGEND**

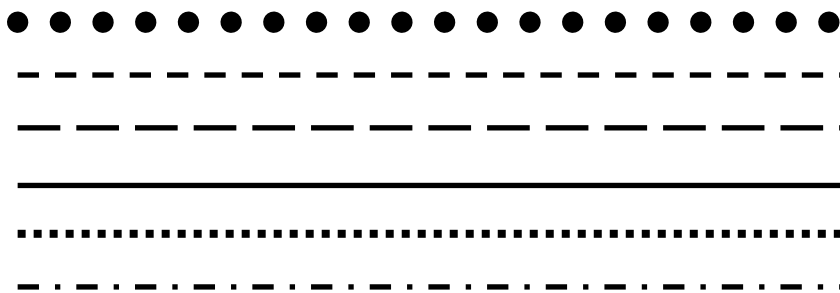

- DISTRIBUTOR LOOM**
- ORANGE WIRE**
- GREEN WIRE**
- BLACK WIRE**
- WHITE WIRE**
- RED WIRE**



**123 Bernard Street  
CHELTENHAM VIC 3192**


**Tel: + 613 9532 6000**

**Tel: + 613 9553 6100**

**Fax: + 613 9532 6001**

**www.iceignition.com**

**Wiring Diagram 7 Amp 2 Step (7062NR) Ignition Box - Inc Booster**

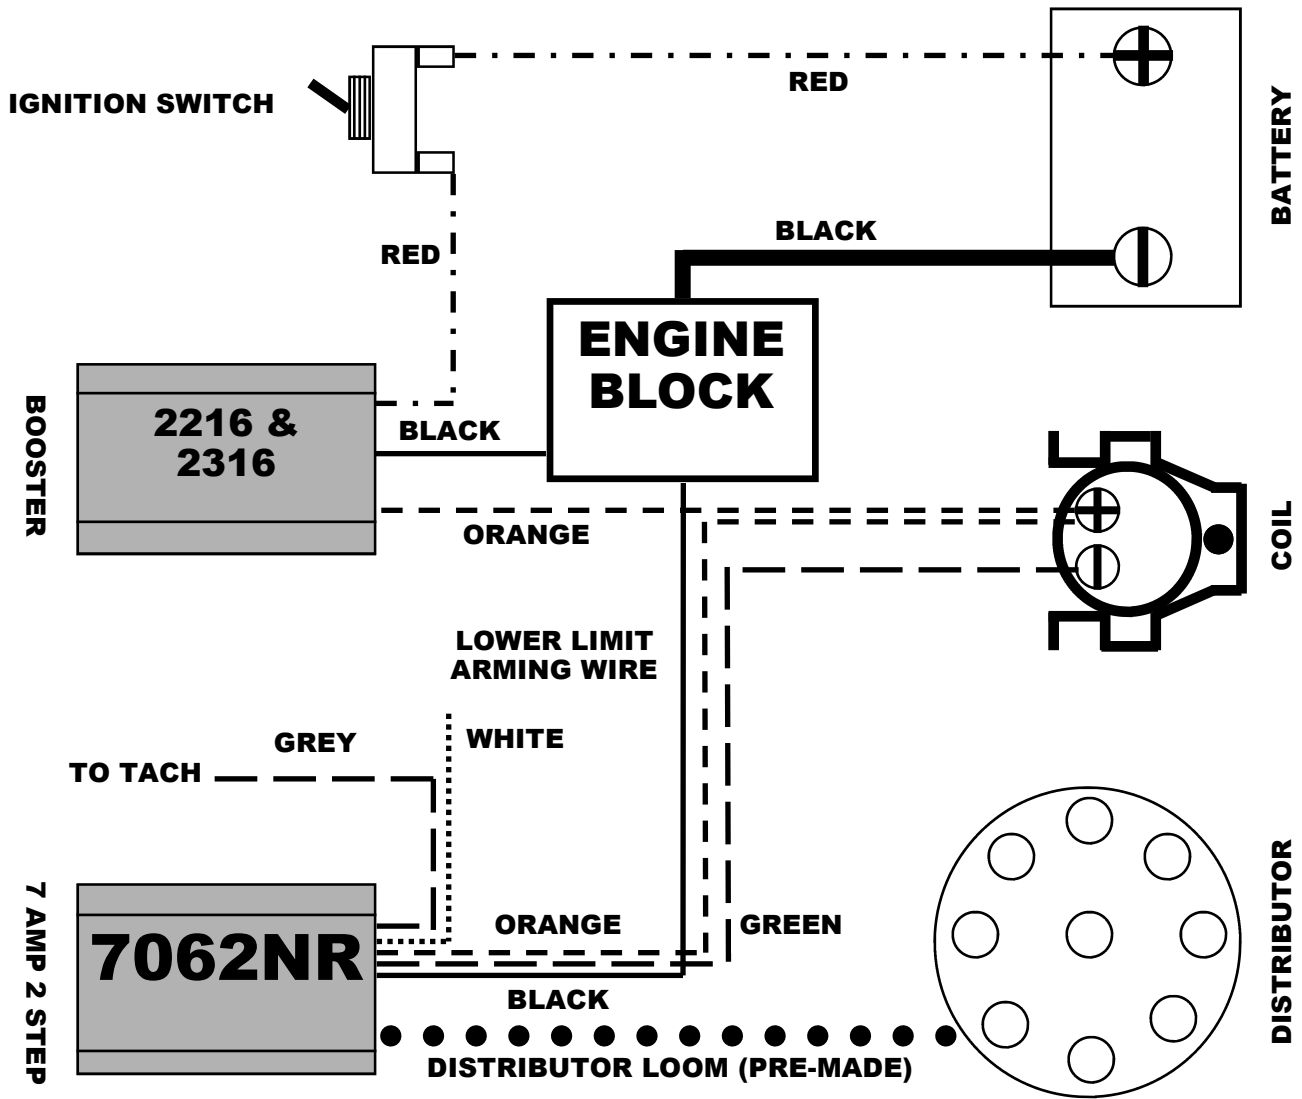

**WIRE COLOR LEGEND**

- DISTRIBUTOR LOOM
- ORANGE WIRE
- GREEN WIRE
- BLACK WIRE
- WHITE WIRE
- RED WIRE



**123 Bernard Street  
CHELTENHAM VIC 3192**

**Tel: + 613 9532 6000**

**Tel: + 613 9553 6100**

**Fax: + 613 9532 6001**

**www.iceignition.com**

## **7 Amp 2 Step (7062NR) Ignition Box - Wiring Notes**

### ***Distributor to module loom:***

- \* Supplied finished - simply connect at distributor end - no termination necessary.
- \* Ensure distributor to module loom is routed separately from module to coil loom and high tension wires.

### ***Module to coil loom (supplied semi finished). Please ensure the following:***

- \* Orange wire to coil positive (run direct to ignition coil - do not splice with any other wires).
- \* Green wire to coil negative (run direct to ignition coil - do not splice with any other wires).
- \* Black wire to earth / ground (run direct to engine block - do not splice with any other wires).
- \* Be sure to keep the earth / ground wire from the ICE modules as short as possible. Always run the earth / ground wire from the ignition module (and voltage booster if fitted), to somewhere on the engine block, same as the battery earth / ground cable as per the instructions below. This is the only way to guarantee proper earth / ground.

### ***Optional features:***

- \* Grey (single) wire = Tach Output ( 12 volt square wave - normally high, then low for 1.1 m/s per spark ).
- \* White (single) wire : Apply 12 volts to activate low rpm limit ( usually armed by trans-brake switch or similar ).
- \* Brown wire = cut this wire to activate 6cyl mode.
- \* Purple wire = cut this wire to activate 4cyl mode.
- \* Pink wire = cut this wire to activate crank trigger mode.
- \* White, Yellow, Blue and Brown wires (grouped together) - refer to multiple retards page.

### ***Power supply to coil positive - no booster or inc booster 2316 / 2216 - ideal:***

- \* Supply 12 volts switched (13.8 - 14.8 volts from alternator) to coil positive or booster (if fitted) via ignition switch.
- \* If vehicle has ballast resistor or resistor wire, by-pass these and feed direct voltage to coil or red wire of booster.
- \* Never leave original wire from the ignition switch connected to the coil positive if booster fitted (refer diagram).
- \* Do not try to power anything but a single coil with the booster.
- \* If wired correctly, two wires go to coil positive and one wire goes to coil negative.

### ***Earth / Ground:***

**THE IMPORTANCE OF THIS STEP CANNOT BE OVER EMPHASIZED AND WILL VOID THE WARRANTY ON THE IGNITION IF IT IS NOT FOLLOWED.**

\* Battery negative cable **MUST** run direct to a bare metal bolt boss on the engine block (should also be attached to body) as a single cable.

\* If the battery is mounted in the front of the vehicle the cable must be a minimum of 12mm - 13mm in diameter including the shielding, and must consist of a fine strand copper core.

\* If the battery is mounted in the rear of the vehicle the cable must be a minimum of 14mm to 15mm in diameter including the shielding, and must consist of a fine strand copper core.

\* For street cars, if you currently have the battery earth / ground cable running from the battery negative to the chassis and chassis to the engine and are relying on the body / roll cage to make the connection for earth / ground, **DO NOT** assume that because your existing ignition works like this, that the ICE Ignition will also work. You will void your warranty and quite possibly have to buy replacement parts.

\* For race cars, if you currently have the battery earth / ground cable running from the battery negative to the roll cage and are relying on the roll cage and aluminum engine plates to make the connection for earth / ground, **DO NOT** assume that because your existing ignition works like this, that the ICE Ignition will also work. You will void your warranty and quite possibly have to buy replacement parts.

### ***General:***

- \* Keep both looms routed away from the high tension wires.
- \* These measures are to ensure no noise enters the loom and disrupts the microprocessor inside the unit.
- \* Mount the unit using the vibration mounts supplied, inside the vehicle cabin, away from heat and moisture.
- \* Avoid soldering wires, as they become brittle where the solder ends, flex at that point, then break.
- \* To ensure unit functions correctly, the above steps must be adhered to.



**123 Bernard Street  
CHELTENHAM VIC 3192**

**Tel: + 613 9532 6000**

**Tel: + 613 9553 6100**

**Fax: + 613 9532 6001**

**www.iceignition.com**

## **7 Amp 2 Step (7062NR) Curve Select switch**

**Digit                      Degrees of automatic advance @ engine rpm**

<b>0 =</b>	<b>Locked timing</b>
<b>1 =</b>	<b>2 Degrees @ 3800 rpm</b>
<b>2 =</b>	<b>4 Degrees @ 3800 rpm</b>
<b>3 =</b>	<b>6 Degrees @ 3800 rpm</b>
<b>4 =</b>	<b>8 Degrees @ 3800 rpm</b>
<b>5 =</b>	<b>10 Degrees @ 3800 rpm</b>
<b>6 =</b>	<b>12 Degrees @ 3800 rpm</b>
<b>7 =</b>	<b>14 Degrees @ 3800 rpm</b>
<b>8 =</b>	<b>Locked timing</b>
<b>9 =</b>	<b>2 Degrees @ 3800 rpm</b>

**Expressed in crankshaft degrees @ engine rpm**



**123 Bernard Street  
CHELTENHAM VIC 3192**

**Tel: + 613 9532 6000**

**Tel: + 613 9553 6100**

**Fax: + 613 9532 6001**

**www.iceignition.com**

## **7 Amp 2 Step (7062NR) - Multiple retards**

### **Retard wires = White & Yellow & Blue & Brown**

**Wire Colour - Apply  
12 volts to activate**

**Degrees of automatic retard**

**White**

**2 Degrees retard when activated**

**Yellow**

**4 Degrees retard when activated**

**Blue**

**6 Degrees retard when activated**

**Brown**

**8 Degrees retard when activated**

**White & Yellow**

**6 Degrees retard when activated**

**White & Blue**

**8 Degrees retard when activated**

**White & Brown**

**10 Degrees retard when activated**

**Yellow & Blue**

**10 Degrees retard when activated**

**Yellow & Brown**

**12 Degrees retard when activated**

**Yellow & White & Blue**

**12 Degrees retard when activated**

**Blue & Brown**

**14 Degrees retard when activated**

**Blue & Brown & White**

**16 Degrees retard when activated**

**Blue & Brown & Yellow**

**18 Degrees retard when activated**

**Brown & Yellow & White**

**14 Degrees retard when activated**

**Brown & Blue & Yellow & White**

**20 Degrees retard when activated**

**Expressed in crankshaft degrees @ engine rpm**