




123 Bernard Street  
CHELTENHAM VIC 3192


Tel: + 613 9532 6000  
Tel: + 613 9553 6100  
Fax: + 613 9532 6001

www.iceignition.com

**7 Amp Ignition Module Part No: 7000E - No Booster**

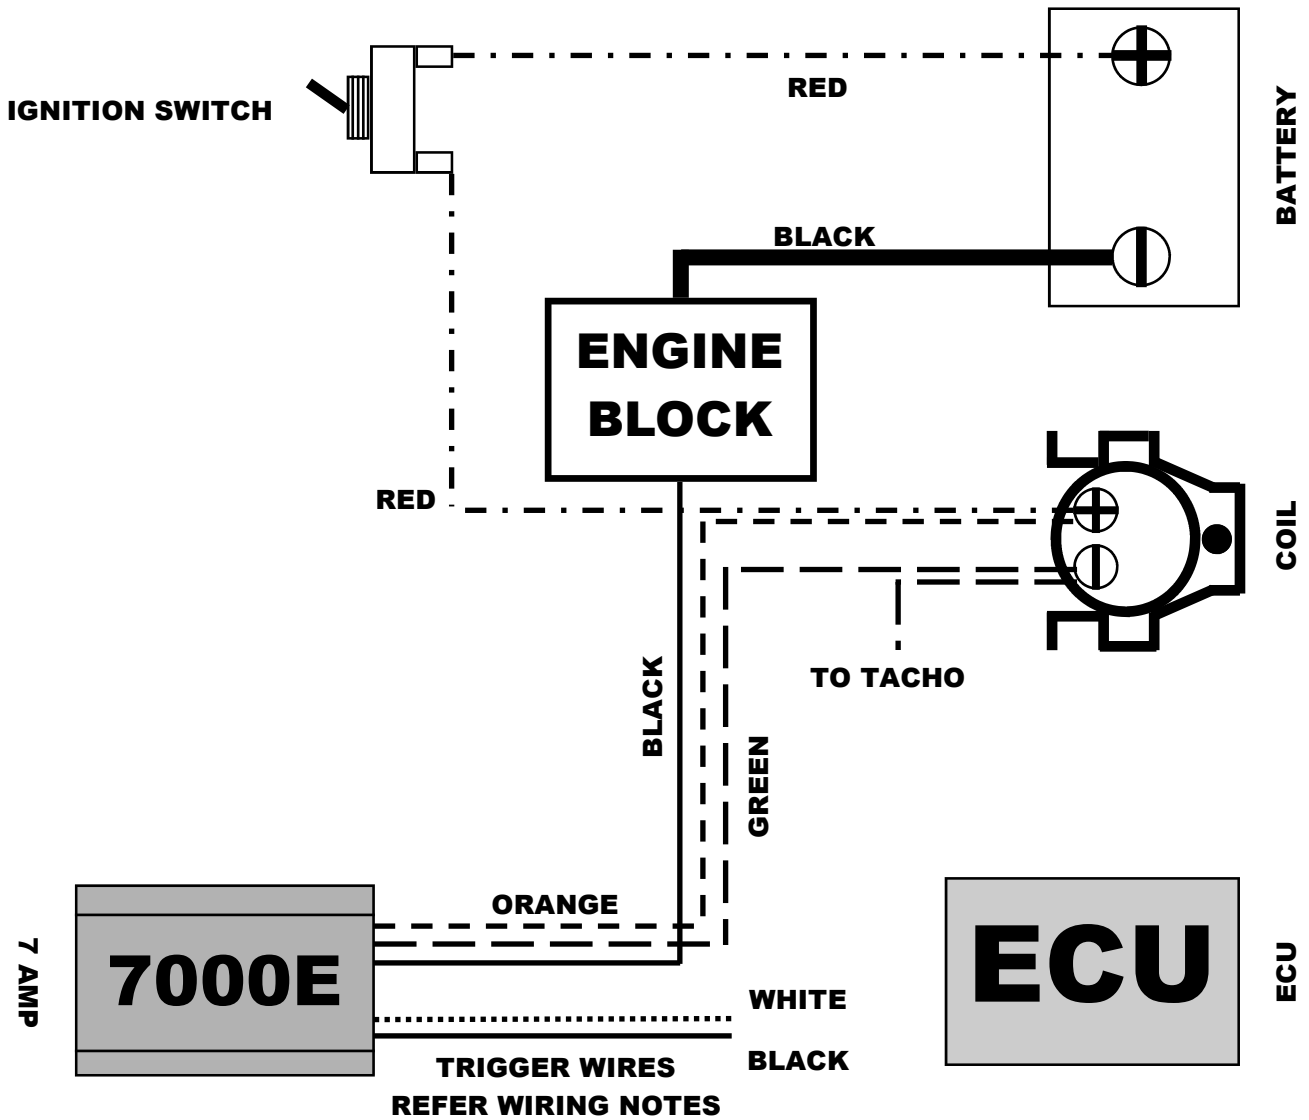

**WIRE COLOR LEGEND**

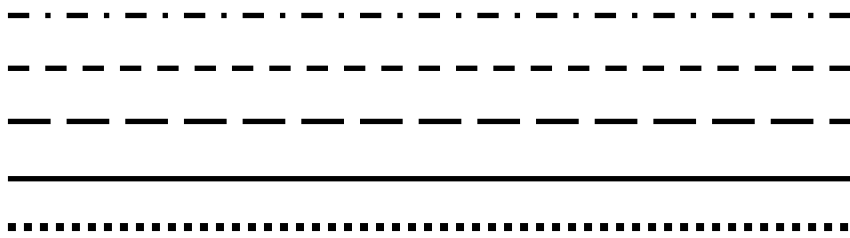

- RED WIRE
- ORANGE WIRE
- GREEN WIRE
- BLACK WIRE
- WHITE WIRE




123 Bernard Street  
CHELTENHAM VIC 3192

Tel: + 613 9532 6000  
Tel: + 613 9553 6100  
Fax: + 613 9532 6001

www.iceignition.com

**7 Amp Ignition Module Part No: 7000E - Inc Booster**

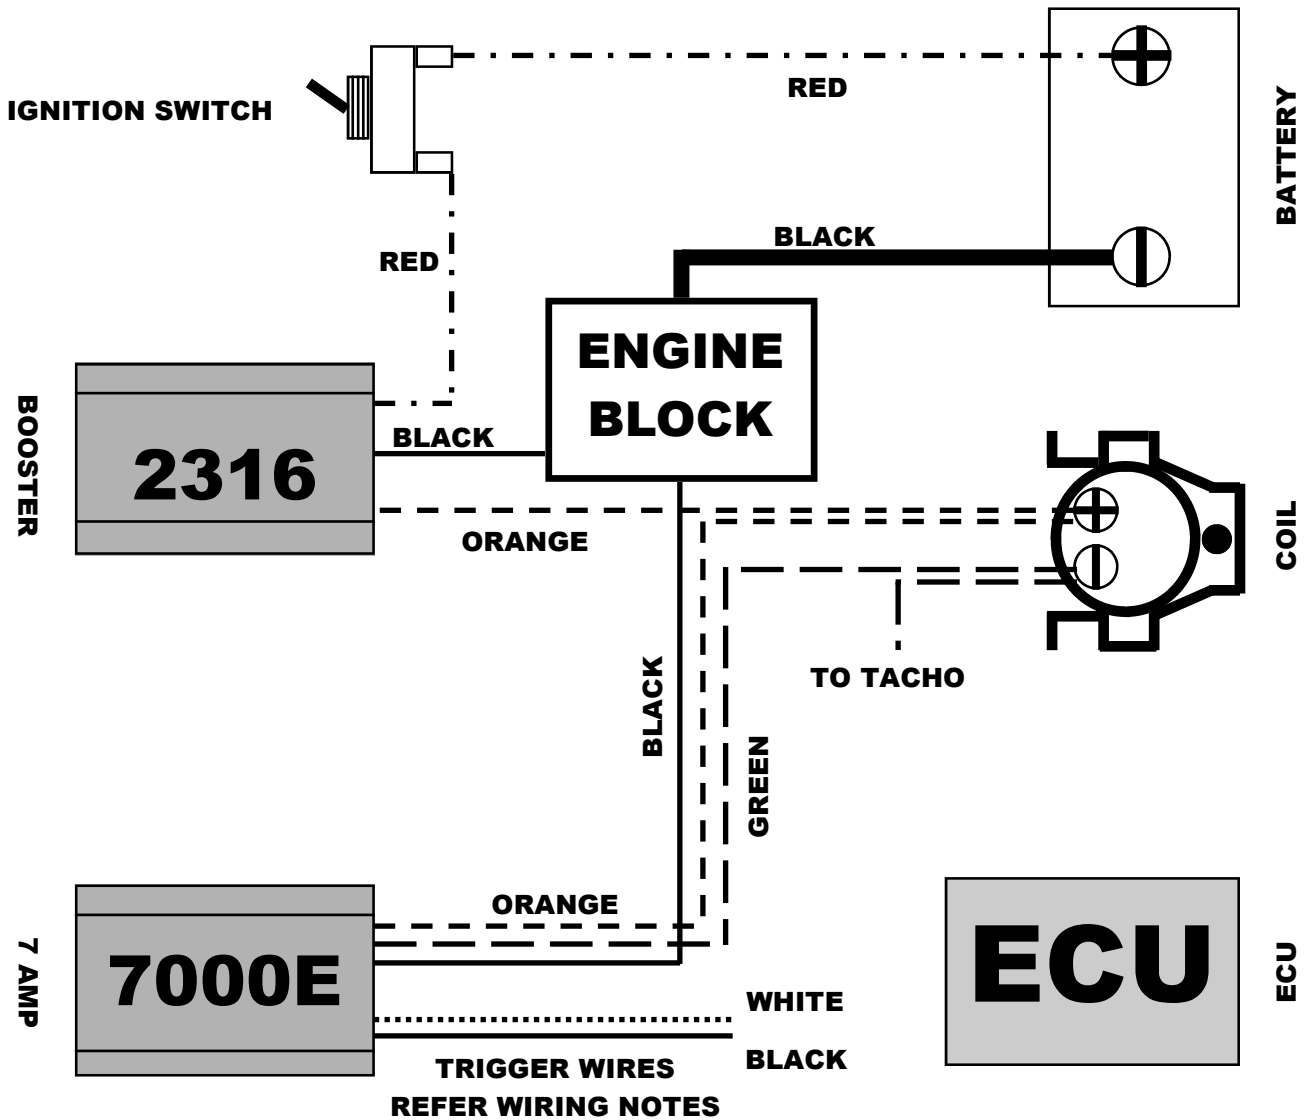

**WIRE COLOR LEGEND**

-----	<b>RED WIRE</b>
-----	<b>ORANGE WIRE</b>
-----	<b>GREEN WIRE</b>
_____	<b>BLACK WIRE</b>
.....	<b>WHITE WIRE</b>



**123 Bernard Street  
CHELTENHAM VIC 3192**

**Tel: + 613 9532 6000**

**Tel: + 613 9553 6100**

**Fax: + 613 9532 6001**

**www.iceignition.com**

## **7 Amp Ignition Module Part No: 7000E - Wiring Notes**

*Module to coil loom (supplied semi finished). Please ensure the following:*

- \* Orange wire to coil positive (run direct to ignition coil - do not splice with any other wires).
- \* Green wire to coil negative (run direct to ignition coil - do not splice with any other wires).
- \* Black wire to earth / ground (run direct to engine block - do not splice with any other wires).
- \* Be sure to keep the earth / ground wire from the ICE modules as short as possible. Always run the earth / ground wire from the ignition module (and voltage booster if fitted), to somewhere on the engine block, same as the battery earth / ground cable as per the instructions below. This is the only way to guarantee proper earth / ground.

*Trigger Wires (white & black):*

Rising Edge = White wire to ignition 12 volts.

Black wire to ignition output wire from ECU - Must be an "Open Collector" type output.

Falling Edge = White wire to ignition output wire from ECU - Minimum 5 volt square wave signal.

Black wire to earth / ground as close to ECU as practical - keep as short as possible.

*Power supply to coil positive - no booster or inc booster 2316 / 2216 - ideal:*

- \* Supply 12 volts switched (13.8 - 14.8 volts from alternator) to coil positive or booster (if fitted) via ignition switch.
- \* If vehicle has ballast resistor or resistor wire, by-pass these and feed direct voltage to coil or red wire of booster.
- \* Never leave original wire from the ignition switch connected to the coil positive if booster fitted (refer diagram).
- \* Do not try to power anything but a single coil with the booster.
- \* If wired correctly, two wires go to coil positive and one wire goes to coil negative.

*Earth / Ground:*

**THE IMPORTANCE OF THIS STEP CANNOT BE OVER EMPHASIZED AND WILL VOID THE WARRANTY ON THE IGNITION IF IT IS NOT FOLLOWED.**

\* Battery negative cable **MUST** run direct to a bare metal bolt boss on the engine block (should also be attached to body) as a single cable.

\* If the battery is mounted in the front of the vehicle the cable must be a minimum of 12mm - 13mm in diameter including the shielding, and must consist of a fine strand copper core.

\* If the battery is mounted in the rear of the vehicle the cable must be a minimum of 14mm to 15mm in diameter including the shielding, and must consist of a fine strand copper core.

\* For street cars, if you currently have the battery earth / ground cable running from the battery negative to the chassis and chassis to the engine and are relying on the body / roll cage to make the connection for earth / ground, **DO NOT** assume that because your existing ignition works like this, that the ICE Ignition will also work. You will void your warranty and quite possibly have to buy replacement parts.

\* For race cars, if you currently have the battery earth / ground cable running from the battery negative to the roll cage and are relying on the roll cage and aluminum engine plates to make the connection for earth / ground, **DO NOT** assume that because your existing ignition works like this, that the ICE Ignition will also work. You will void your warranty and quite possibly have to buy replacement parts.

*General:*

- \* Keep looms routed away from the high tension wires.
- \* These measures are to ensure no noise enters the loom and disrupts the microprocessor inside the unit.
- \* Mount the unit using the vibration mounts supplied, inside the vehicle cabin, away from heat and moisture.
- \* Avoid soldering wires, as they become brittle where the solder ends, flex at that point, then break.
- \* To ensure unit functions correctly, the above steps must be adhered to.